


Ffos Wilkin Instruction Sheet

Kitchen Cooker Use



The kitchen is equipped with a portable gas camping cooker

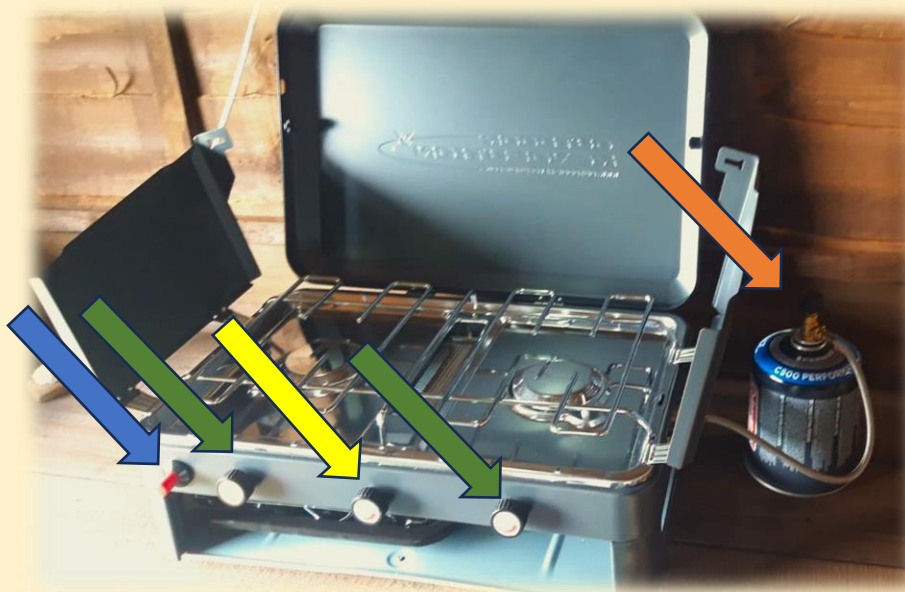

When needed, open the main lid and side wind deflectors.

Switch on main gas valve (orange arrow)

The top rings are controlled by the valves (green arrows)
and grill by the valve (yellow).

To ignite turn the required valve to max and then
repeatedly press the ignitor (blue arrow).

When finished, switch off all valves and close the lids.



If the gas runs out there are spares stored in the kitchen drawers.

To replace the gas can switch off main valve.

Then unscrew the empty can in an anti-clockwise direction.

Screw on the new gas can in a clockwise direction.